

Tel: +44 (0) 15396 24040 Email: info@lyon.co.uk Web: www.lyon.co.uk

Lyon Equipment Limited, Units 3-7, Tebay Business Park, CA10 355, United Kingdom



For more detailed user information and to information and to these instructions and a Declaration of Conformity follow the link above or scan the QR code with your smart phone



www.lyon.co.uk/downloads

# Certification UK 0 1 20

When used for a one person load:

BS EN 795:2012 Type B

"Personal fall protection equipment.
Anchor devices"

When used for a two person load during rescue: CEN/TS 16415:2013 Type B

"Personal fall protection equipment – Anchor devices – Recommendations for anchor devices for use by more than one person simultaneously"

When used for rescue, this item is not classed as PPE and is not covered by PPE Regulation (EU) 2016/425 as brought into GB Law and amended.

### **Approved Body**

UK Personal Protective Equipment Regulation (EU) 2016/425 as brought into GB Law and amended. UK Type-examination by: Approved Body N° 0321 SATRA Technology Centre Limited Wyndham Way, Telford Way Kettering, Northamptonshire NN16 8SD, United Kingdom

### **Breaking Load**

25 kN

This information to be read and kept in conjunction with the Lyon general user instructions

#### Us

This product is designed as a temporary transportable anchor for work at height purposes.

This strop forms only one part of a fall arrest system and must not be used alone as a fall arrestor or lanyard. All strops should be regarded as having no energy absorption, and are not designed to absorb dynamic impacts.

The strop will transmit any force applied directly to the structure in the direction in which it is applied. The strop will attempt to align with any applied force, and may slide if the load is not applied perpendicular to the structure.

The strop may be used in conjunction with compatible items of personal fall protection equipment of suitable specification, with due consideration to the limitations of each individual piece of equipment in the safety chain.

This product is Personal Protective Equipment, and should be a personal issue item. In normal usage it is for one person only, but during rescue may be used for a maximum of two people simultaneously. Please note it is NOT lifting equipment.

The effective performance of this strop depends on its strength, the quality of the anchor point, and the skills of the user in placing it. Ensure that anchor points are unquestionably reliable and do not have any sharp edges that could damage the strop.


Only connect to the eyes of the strop, and always use an BS EN 362 connector. Ensure the connector is correctly loaded in accordance with the connector user instructions. Do not use more than one connector in one eye. Beware of creating a sharp angle in the wire, as this may damage the strop. Always use a strop of appropriate length, so that the angle where the ends of the strop meet the connector is less than 90°, as shown.



Performance and ultimate strength will be reduced by larks footing / choking around anchor points, storage and ageing due to use, etc. (list not exhaustive).

Please note that if a protective sleeve is fitted to a strop, this is designed to reduce wear and therefore offer a degree of protection to the strop and to the surface of the structure; consequently the protective sleeve may suffer damage which is non-critical. Thorough inspection will allow the competent inspector to determine if the strop is still serviceable. If you are in any doubt the strop must be removed from service immediately.

### Inspection

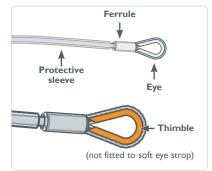

Strops should be subject to:

- · Pre-use checks
- Thorough inspections
- Interim inspections (as appropriate)

The whole strop should be checked by visual inspection of the wire and the ferrules for any signs of corrosion, permanent deformation or other damage. There should be no broken strands or kinks in the wire. The ferrules should be tight with no movement of the wire within the ferrule, and there should be no cracks in the ferrules. There should be no deformation of the eyes or thimbles (if fitted). The checks should be undertaken in good light. Any item showing any defect should be withdrawn from service immediately.

It is recommended the strop is marked with the date of the next or last inspection.

### Chemicals

Avoid all contact with chemical reagents that could affect the performance of the strop, e.g. acids, caustic substances and oxidising agents. Discard this product immediately if contamination is even suspected to have occurred.

### Materials

Galvanised steel wire with aluminium alloy ferrules or stainless steel wire with copper ferrules.

Stainless steel thimbles where fitted.

The protective sleeve is polyester reinforced PVC.

### **Obsolescence**

The lifetime of this strop is potentially indefinite if stored correctly.

### Marking

Marking, if required, can be made on the protective sleeve.

LYON	Manufacturer's logo  Minimum strength when tested to BS EN 795							
BL 25 kN								
idN	Individual serial number will be in the format YYDDD 12345. The first two digits give the year of manufactur: the next three digits the day of the year from 001 to 365 and the five digits after is th number in the series							
K 0120	United Kingdom Conformit Assessed and Approved Body Number							
BS EN 795:2012 Type B	Standards to which this item conform							
CEN/TS 16415:2013 Type B								
LO 7 n	Product code, where n is an indication of length. ST indicates the product is made of stainless steel. SOFT indicates that thimbles are not fitted to the eyes.							
<b> </b> =1	Number of simultaneous users permitted when used in accordance with BS EN 795							
<b>†</b> =2	Number of simultaneous users permitted when used for rescue, in accordance with CEN/TS 16415:2013							

End of UKCA information document





### 7mm Wire Anchor Strop

( € 0598 EN 795:2012 Type B

UK 0120 BS EN 795:2012 Type

CEN/TS 16415:2013

Tel: +44 (0) 15396 24040 Email: info@lyon.co.uk Web: www.lyon.co.uk

Lyon Equipment Limited, Units 3-7, Tebay Business Park, CA10 355, United Kingdom



For more detailed user information and to download a PDF copy of these instructions and a Declaration of Conformity follow the link above or scan the QR code with your smart phone



www.lyon.co.uk/downloads

# Certification

When used for a one person load: EN 795:2012 Type B

"Personal fall protection equipment.
Anchor devices"

When used for a two person load during rescue: CEN/TS | 64|5:20|3 Type B

"Personal fall protection equipment – Anchor devices – Recommendations for anchor devices for use by more than one person simultaneously"

When used for rescue, this item is not classed as PPE and is not covered by PPE Regulation (EU) 2016/425

### **Notified Body**

EU Type-examination for Regulation 2016/425 by: Notified Body N° 2777 SATRA Technology Europe Limited Bracetown Business Park, Clonee, Dublin, D15 YN2P, Ireland.

### **Breaking Load**

25 kN

This information to be read and kept in conjunction with the Lyon general user instructions

### Use

This product is designed as a temporary transportable anchor for work at height purposes.

This strop forms only one part of a fall arrest system and must not be used alone as a fall arrestor or lanyard. All strops should be regarded as having no energy absorption, and are not designed to absorb dynamic impacts.

The strop will transmit any force applied directly to the structure in the direction in which it is applied. The strop will attempt to align with any applied force, and may slide if the load is not applied perpendicular to the structure.

The strop may be used in conjunction with compatible items of personal fall protection equipment of suitable specification, with due consideration to the limitations of each individual piece of equipment in the safety chain.

This product is Personal Protective Equipment, and should be a personal issue item. In normal usage it is for one person only, but during rescue may be used for a maximum of two people simultaneously. Please note it is NOT lifting equipment.

The effective performance of this strop depends on its strength, the quality of the anchor point, and the skills of the user in placing it. Ensure that anchor points are unquestionably reliable and do not have any sharp edges that could damage the strop.


Only connect to the eyes of the strop, and always use an EN 362 connector. Ensure the connector is correctly loaded in accordance with the connector user instructions. Do not use more than one connector in one eye. Beware of creating a sharp angle in the wire, as this may damage the strop. Always use a strop of appropriate length, so that the angle where the ends of the strop meet the connector is less than 90°, as shown.



Performance and ultimate strength will be reduced by larks footing / choking around anchor points, storage and ageing due to use, etc. (list not exhaustive).

Please note that if a protective sleeve is fitted to a strop, this is designed to reduce wear and therefore offer a degree of protection to the strop and to the surface of the structure; consequently the protective sleeve may suffer damage which is non-critical. Thorough inspection will allow the competent inspector to determine if the strop is still serviceable. If you are in any doubt the strop must be removed from service immediately.

### Inspection

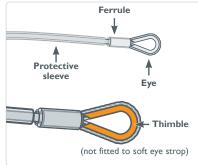

Strops should be subject to:

- · Pre-use checks
- · Thorough inspections
- Interim inspections (as appropriate)

The whole strop should be checked by visual inspection of the wire and the ferrules for any signs of corrosion, permanent deformation or other damage. There should be no broken strands or kinks in the wire. The ferrules should be tight with no movement of the wire within the ferrule, and there should be no cracks in the ferrules. There should be no deformation of the eyes or thimbles (if fitted). The checks should be undertaken in good light. Any item showing any defect should be withdrawn from service immediately.

It is recommended the strop is marked with the date of the next or last inspection.

### Chemicals

Avoid all contact with chemical reagents that could affect the performance of the strop, e.g. acids, caustic substances and oxidising agents. Discard this product immediately if contamination is even suspected to have occurred.

### **Materials**

Galvanised steel wire with aluminium alloy ferrules or stainless steel wire with copper ferrules.

Stainless steel thimbles where fitted.

The protective sleeve is polyester reinforced PVC.

### Obsolescence

The lifetime of this strop is potentially indefinite if stored correctly.

### Marking

Marking, if required, can be made on the protective sleeve.

LYON	Manufacturer's logo						
BL 25 kN	Minimum strength when tested to EN 795						
idN	Individual serial number will be in the format YYDDD 12345. The first two digits give the year of manufacture, the next three digits the day of the year from 001 to 365 and the five digits after is the number in the series						
C€0598	European Conformity Notified Body Number						
EN 795:2012 Type B	Standards to which this item conform						
CEN/TS 16415:2013 Type B							
LO 7 n	Product code, where n is an indication of length. ST indicates the product is made of stainless steel. SOFT indicates that thimbles are not fitted to the eyes.						
<b>†</b> =1	Number of simultaneous users permitted when used in accordance with EN 795						
<b>i</b> =2	Number of simultaneous users permitted when used for rescue, in accordance with CEN/TS 16415:2013						

End of CE information document

Ľ**ΥΟ**Π

**General User** 

Instructions





 $\prod$ i

© Lyon Equipment Limited 2024

VVeb: www.lyon.co.uk

Email: info@lyon.co.uk

United Kingdom

CA10 355

Cumbria,

Tel: +44 (0) 15396 24040

Units 3-1, lebay Business Park,

Lyon Equipment Limited,

www.lyon.co.uk/downloads

## Approved Body controlling manufacture (where applicable)

Where items of Personal Protective Equipment require a UKCA type examination in accordance with Personal Protective Equipment (EU) Regulation 2016/425 on personal protective equipment as brought into GB Law and amended. The body controlling manufacture is:

### Approved Body N° 0120

SGS United Kingdom Limited Rossmore Business Park, Inward Way, Ellesmere Port, Cheshire CH65 3EN, United Kingdom

## Notified Body controlling manufacture (where applicable)

Where items of Personal Protective Equipment require an EU type examination in accordance with Personal Protective Equipment (EU) Regulation 2016/425. The body controlling the manufacture is:

Notified Body N° 0598 SGS Fimko OY Takomotie 8 FL-00380 HFL SINKI, Finland

### WARNING

Make sure that you have read and understood these instructions before using this equipment. These user instructions are to be read and kept along with any other user information provided.

Activities at height are hazardous and may lead to injury or death. It is the user's responsibility, at all times, to ensure that they understand the correct use of any equipment supplied by or through Lyon Equipment, use it only for the purposes for which it is designed, and practice proper safety procedures including having a rescue plan in case of emergency.

This product must not be used outside its limitations, or for any purpose other than those described in the user instructions. Misuses forbidden in these instructions are examples only; many other misuses may exist which could lead to injury or death.

Do not use combinations of items of equipment in which the safe function of any one item is affected or interferes with the safe function of another.

Please note, the information in these user instructions is not exhaustive, and is not a substitute for comprehensive instruction and training by a competent person.

Lyon Equipment is not responsible for any consequences, whether direct, indirect or accidental, resulting from the use of its products.

If you are unsure about the correct use of this product, please contact us.

### Who can use this equipment

This equipment should only be used by trained, competent and responsible persons, or the user should be under the direct supervision of a trained, competent and responsible person.

Activities at height should not be undertaken by persons affected by alcohol or drug dependence, diabetes, epilepsy, fits, blackouts, fear of heights, vertigo / dizziness / difficulty with balance, heart disease / chest pain, high or low blood pressure, impaired limb function, obesity, psychiatric illness, musculoskeletal issues, e.g. a bad back.

### General instructions for use

Equipment must be checked before each use, to ensure it is serviceable and operates correctly. Checks should also be carried out during use. In addition, a thorough inspection by a competent inspector should be carried out in strict accordance with these user instructions, and a record kept of these inspections.

This product may be used with any compatible item of equipment, keeping in mind the limitations of each item in the safety chain. It should be noted that a full body harness is the only type of harness which may be used in a fall arrest system.

The anchor device or anchor point is of primary importance and should be unquestionably reliable. It should be strong enough to withstand the foreseeable maximum load that could be applied e.g. in the event of a fall.

When selecting an anchor, the anticipated directions of loading and potential loads should be taken into account.

Anchors should be selected and positioned to allow work to be carried out in such a way as to minimise the potential for a fall and potential fall distance, for example by keeping the anchor point / device above the user.

# Anchors should not have sharp or rough edges which could damage equipment (use edge protection if necessary).

On each occasion of use, verify the free space required beneath the user in order to avoid an impact. Always try to place protection so that any fall will be stopped before the user hits the ground or any other obstruction. Remember to allow for rope stretch and slippage in the belay device or rope ascender / descender. In a fall arrest situation, the user must be protected from dynamic forces of greater than 6 kN in the event of a fall, e.g. by use of a fall arrest system incorporating a (BS) EN 355 energy absorber.

### Note to resellers

If the product is resold within the EU, the reseller is responsible for providing instructions for use, maintenance, periodic examination and for repair in the language of the country in which the product is to be used.

If you require the Intrastat commodity code / customs tariff code or NATO stock number (where applicable) for this product, please contact us via www.lyon.co.uk

### Maintaining your equipment

Wash in clean water not exceeding 30°C with pure soap and rinse in clean cold water. Do not use chemical products, solvents or detergents — these should be regarded as harmful. Due to the difficulties in effectively disinfecting equipment, we recommend that any contaminated equipment should be withdrawn from use and disposed of in a suitable manner.

Equipment must be clean and dry before storing. Always allow to dry naturally, away from direct heat. Equipment should be stored in a cool, dry, well-ventilated area, away from excessive heat, high humidity, sharp edges, corrosives, sunlight or other sources of ultraviolet light (UV) and other possible causes of damage.

During transport, this product should be protected from abrasion, mechanical damage, chemical contamination, UV and heat.

#### Toytiles

Always keep textile items at temperatures between -30°C and +50°C.

### **Metal items**

Always keep metal items at temperatures between -20°C and +60°C.

No alterations, additions or repairs may be made to this product without the manufacturer's prior written consent; if done, the repair must be carried out by a competent person for repair authorised by Lyon Equipment to make the repair, and in accordance with specified procedures.

These instructions must be strictly adhered to.

### Inspection

A thorough inspection should be carried out at least every 6 months by a competent inspector in accordance with these user instructions. A record of these checks should be kept with the product along with these user instructions. In addition, interim inspections should be carried out where products are used intensively, or in particularly harsh environments where damage is more likely to occur, or where legislation or the type of equipment make it necessary.

### Document continues overleaf

Pre-use and thorough inspections are essential because the user's level of protection depends on the continuing correct performance of this product.

PPE (Personal Protective Equipment) inspection training is available from Lyon Equipment.

## Lifetime, and when to withdraw your equipment from use

Withdraw your equipment from use if any one of the following applies:

- It shows sign of wear and tear / damage that may affect performance
- Markings on the product are no longer legible.
- You suspect it may have been exposed to chemical contamination or extreme temperatures
- · It fails a periodic examination
- It has been used to arrest a fall or has been excessively loaded
- It is more than 10 years after the date of manufacture (textile items or items with textile components).
   Metal items have a potentially indefinite lifespan if stored correctly. Some products may require periodic servicing to continue in use - refer to product-specific user instructions
- If you have any reason to doubt that it is safe to use. It is the responsibility of the competent inspector to decide whether the equipment should be put back into use, or permanently withdrawn from use. Equipment permanently withdrawn from use must be destroyed, and should be recycled where facilities exist.

Certain environmental elements will considerably accelerate wear: salt, sand, dust, snow, ice, moisture, chemicals, sunlight (UV radiation) – list not exhaustive.

Warning: the safe working life of this product may be as short as its first use in extreme circumstances.

If in doubt, do not hesitate to scrap this product.

#### Guarantee


In the event of any defect in materials or workmanship please return the product to the dealer, distributor or manufacturer within 3 years of purchase for inspection. We will replace or repair as required. This guarantee does not cover normal wear and tear or accidental damage.

### Inspection records

A record must be kept for each component, subsystem and system, including name and contact details of the manufacturer or supplier, product description, serial number, year of manufacture, date of purchase, date of first use, any other relevant information, and history of periodic examinations and repairs, including dates and details of inspections and repairs, the name and signature of the competent inspector and the next due date for inspection. An example of a suitable equipment record is shown on this user instruction and can also be downloaded at www.lyon.co.uk

Local jurisdiction may dictate that extra information be recorded in the inspection record – check your country's legal requirements. Some products may have features which need special monitoring during periodic inspections, e.g. wear indicators, in which case this information should also be recorded on the inspection record.

### **Explanation of symbols**

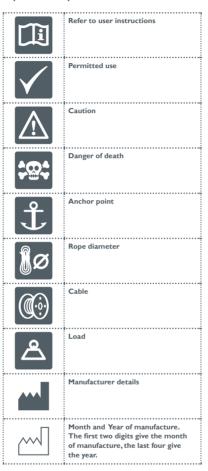

Additional symbols may be used. See specific product instruction for explanations

Lyon Product Inspection Record				Record of inspection and repair	Next due date							
	Purchase date	Certificate of conformity number	Other relevant information		Name and signature of competent inspector							ection record
			196 24040 n.co.uk ion.co.uk									oart of the product inspe
	Year of manufacture	Date of first use	Tel: +44 (0) 1539 6 24040 Ernali: info@)yon.co.uk Website: www.lyon.co.uk		Comments							oduct must be kept as p
			Address Unit 3-7 Teboy Business Park Cumbria, CA 10 35S United Kingdom									All user instructions supplied with this product must be kept as part of the product inspection record
	Product description	Individual serial number										
	Product code	Length if applicable	Manufacturer Lyon Equipment Limited		Date							EN